

NATURAL WOOD BURNING

FIRE PITS

SAFETY INSTRUCTIONS



FOR YOUR SAFETY – READ BEFORE OPERATING

IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A PROFESSIONAL

WARNING AND SAFETY INFORMATION

- This product is for outdoor use only.
- Do not use under a patio or overhanging roof structure
- Never leave the fire pit unattended
- Never leave children unattended near fire pit
- Do not install on wooden decks, or any other type of flammable surface
- Fire pit must be mounted on an even and level ground surface
- Adhere to recommended clearances for installation (minimum of 10 feet sides/top)
- Do not install near any combustibles or flammable objects (side or overhead) such as trees, branches, wood structures, houses and dry vegetation
- Do not overload the fire pit. It can cause the flame to flare out of control
- Never use liquid fuel to start the fire such as kerosene, gasoline, lighter fluid or any other type
- Use only natural wood, never use any type of wax logs or any pressure treated wood
- Be sure to maintain a safe distance from the fire pit
- Fire pit is very hot while in use and after use. Do not touch or move the fire pit, until enough cooling time has elapsed